

OWNER'S MANUAL

Copyright © 2007 Tohatsu Corporation. All rights reserved. No part of this manual may be reproduced or transmitted in any form or by any means without the express written permission of Tohatsu Corporation.

YOUR TOHATSU OUTBOARD MOTOR

OWNER REGISTRATION AND IDENTIFICATION

Upon purchasing this product, be sure your dealer* fills out the WARRANTY CARD correctly and completely and mails it to the distributor. This card identifies you as the legal owner of the product and serves as your warranty registration.

If this procedure is not followed, your outboard motor will not be covered by warranty.

*: In this manual, "dealer" always means an authorized TOHATSU dealer.

PRE-DELIVERY CHECK

Be sure that the product has been checked by the dealer before the delivery.

LIMITED WARRANTY

This TOHATSU product is fully guaranteed against defective materials and workmanship for the period from the date of purchase, provided that the purchase has been registered in accordance with the above.

The limited warranty will not apply to the normal wear and tear of parts, adjustments, tune-ups, or to any damage caused by:

- 1) Use or operation NOT conforming to the instructions described in this owner's manual,
- 2) Participation in or preparation for racing or other competitive activities,
- 3) Water entering the engine or the engine room,
- 4) Damage of an accidents, collisions, contact with foreign materials, or submersion.
- 5) Growth of marine organisms on motor surfaces.
- 6) Any other careless use or operation.
- 7) Normal deterioration.

The limited warranty does not cover maintenance items. The following items are some examples not to be covered by the limited warranty.

spark plugs, anode, trim-tub, propeller, fuel filter, oil filter, carbon brush, starter rope, shear-pin, split-pin, bolt-nut-washer, wire cable, rubber goods: pump impeller, oil seal, "O"-ring, fuel pipe, primer bulb, etc., vinyl tube

The warranty will become void if the product has been altered, modified, or repaired by anyone other than a company or service firm authorized by TOHATSU.

The warranty will cover only your TOHATSU product and will not cover the boat the product is mounted on, the trailer, equipment, or accessories associated with the product.

Serial Number

In the space below, please record the engine's serial number (indicated both on the lower motor cover and on the cylinder block). This number will come in handy in the event of theft or to help in quickly identifying the product type.

Serial Number: _____

To You, Our Customer:

Thank you for selecting a TOHATSU product. You are now the proud owner of an excellent outboard engine that will serve you for many years to come.

We would like to point out that carefree usage can only be assured on condition that this manual is read through in its entirety and the maintenance routines described later in this manual are followed carefully. Should difficulty arise with the engine, please follow the troubleshooting procedures listed at the end of this manual. If the problem persists, contact an authorized TOHATSU service shop or your dealer.

We hope you will get much enjoyment from this product and wish you good luck in your boating adventures.

TOHATSU CORPORATION

NOTICE: DANGER/WARNING/CAUTION/Note

Before operating your outboard motor, be sure to thoroughly read and understand this Owner's Manual and follow all of the instructions shown. Of particular importance is information preceded by the words "DANGER," "WARNING," "CAUTION," and "Note." Always pay special attention to such information to ensure safer and trouble-free operation at all times.

 **DANGER**

Failure to observe will result in severe personal injury or death.

▲ WARNING

Failure to observe could result in severe personal injury or death.

▲ CAUTION

Failure to observe could result in minor personal injury or product or property damage.

Note:

This instruction provides special information to facilitate the use or maintenance of the outboard or to clarify important points.

EMERGENCY STOP SWITCH

The stop switch will cut off the engine when the stop switch line is pulled out. This line can be attached to the body of the operator, effectively preventing injuries from the propeller in case he/she falls overboard.

We highly recommend use of the stop switch line because it can save the life of the operator if something bad happens. However, we would also like to point out the drawbacks of the switch. Accidental activation of the switch (such as the line being pulled out in heavy seas) could cause passengers to lose their balance and even fall overboard, or it could result in loss of power in heavy seas, strong currents, or high winds. Loss of control while mooring is another potential hazard.

To prevent such hazardous situations, the 500 mm line is coiled and can extend to a full 1,300 mm.

WARNINGS

As the operator/driver of the boat, you are responsible for the safety of those aboard and those in other crafts around yours, and for following local boating regulations. Therefore you should possess thorough knowledge of correct operation of the boat, its accessories, and the engine. To learn about the correct operation and maintenance of the engine, please read through this manual carefully.

It is very difficult for a person standing or floating in the water to take evasive action should he or she see a power boat heading in his/her direction, even at a slow speed. Therefore, when your boat is in the immediate vicinity of people in the water, the engine should be shifted to neutral and shut off.

SERIOUS INJURY IS LIKELY IF A PERSON IN THE WATER MAKES CONTACT WITH A MOVING BOAT, GEAR HOUSING, PROPELLER, OR ANY SOLID DEVICE RIGIDLY ATTACHED TO A BOAT OR GEAR HOUSING.

It is the operator's responsibility to perform all safety checks and to ensure that all lubrication and maintenance instructions are complied with for safe operation. It is also the operator's responsibility to return the unit to the local dealer for periodic inspection.

Correct periodic maintenance and good care of this outboard engine will lessen the chance of problems and keep overall operating expenses at a minimum.

SERVICING, REPLACEMENT PARTS, & LUBRICANTS

Only let an authorized TOHATSU service shop perform servicing or maintenance on this product. Be sure to use genuine parts and genuine lubricants or recommended lubricants.

MAINTENANCE

As the owner of this outboard engine, you should be acquainted with its correct maintenance. Please comply with all instructions on lubrication and maintenance, and return the engine to the dealer or service shop for periodic inspection at the prescribed intervals.

Troublefree operation cannot be expected unless the engine receives adequate periodic maintenance. If maintenance is performed periodically, it is not likely that a costly overhaul will ever be required.

USE OF SERVICE SHOP

When subjecting your TOHATSU product to a check or repair, please be sure to use a TOHATSU dealer authorized by TOHATSU or a TOHATSU agent.

CONTENTS





	Page
1. SPECIFICATIONS	1
2. NAMES OF PARTS	2
3. INSTALLATION	5
1. MOUNTING THE ENGINE ON BOAT	5
2. INSTALLING THE REMOTE CONTROL DEVICES	6
3. INSTALLING THE BATTERY	9
4. PRE-OPERATING PREPARATIONS	10
1. GASOLINE AND ENGINE OIL	10
2. BREAK-IN	11
5. ENGINE OPERATION	12
1. STARTING	12
2. WARMING UP THE ENGINE	17
3. FORWARD AND REVERSE	18
4. STOPPING	20
5. TRIM ANGLE	21
6. TILT UP, TILT DOWN	22
7. SHALLOW WATER OPERATION	23
6. REMOVING AND CARRYING THE MOTOR	24
1. Removing the motor	24
2. Carrying the motor	24
3. Storing the motor	24
7. TRAILERING	25
8. ADJUSTMENT	26
9. INSPECTION AND MAINTENANCE	27
1. DAILY INSPECTION	28
2. PERIODIC INSPECTION	32
3. OFF-SEASON STORAGE	35
4. PRE-SEASON CHECK	36
5. MOTOR SUBMERGED IN WATER	37
6. COLD WEATHER PRECAUTIONS	37
7. CHECKING AFTER STRIKING UNDERWATER OBJECT	37
10. TROUBLESHOOTING	38
11. TOOL KIT AND SPARE PARTS	40
12. ACCESSORIES	41
13. PROPELLER TABLE	42
14. WIRING DIAGRAMS	43

1. SPECIFICATIONS




MODEL	8B	8BEF	8BEP	9.8B	9.8BEF	9.8BEP
Overall length, mm	780		505	780		505
Overall width, mm	320		275	320		275
Overall height, mm	S: 996	L: 1123	UL: 1250	S: 996	L: 1123	UL: 1250
Transom height, mm	S: 436	L: 563	UL: 690	S: 436	L: 563	UL: 690
Weight(s), Kg S/L/UL	26/27/28	29/30/31	28.5/29.5/30.5	26/27/28	29/30/31	28.5/29.5/30.5
Output, kW	5.9			7.2		
Full-throttle speed range, rpm	4,500-5,500			5,000-6,000		
No. of cylinder	2			2		
Piston displacement, mL	169			169		
Bore & stroke, mm	50 x 43			50 x 43		
Exhaust system	Through hub exhaust			Through hub exhaust		
Lubrication system	Engine oil mixed gasoline			Engine oil mixed gasoline		
Cooling system	Forced water cooling			Forced water cooling		
Starting system	Manual	Electric starter motor:Manual		Manual	Electric starter motor:Manual	
Ignition	Flywheel Magneto C. D. ignition			Flywheel Magneto C. D. ignition		
Spark plug	NGK BP7HS-10/BPR7HS-10 or CHAMPION L82YC RL82YC (Gap 1.0 mm)			NGK BP7HS-10/BPR7HS-10 or CHAMPION L82YC RL82YC (Gap 1.0 mm)		
Tilt stages	6			6		
Fuel mixing ratio	Unleaded gasoline 50: Genuine 2-stroke engine oil 1			Unleaded gasoline 50: Genuine 2-stroke engine oil 1		
Gear oil	Genuine gear oil (API GL5, SAE #80 to 90), Approx. 320 mL			Genuine gear oil (API GL5, SAE #80 to 90), Approx. 320 mL		
Fuel tank capacity	12 L			12 L		
Gear reduction ratio	13 : 27			13 : 27		

2. NAME OF PARTS






8B /9.8B

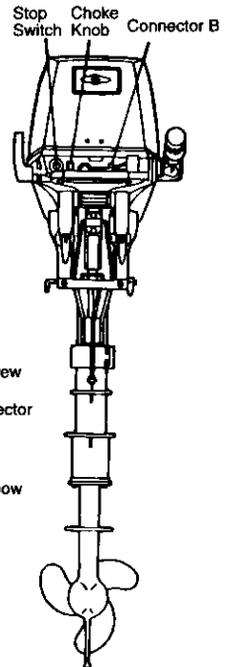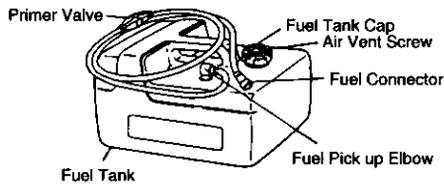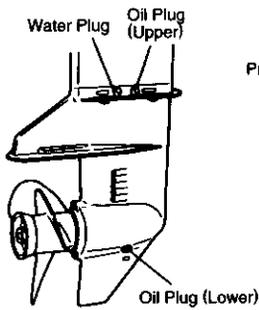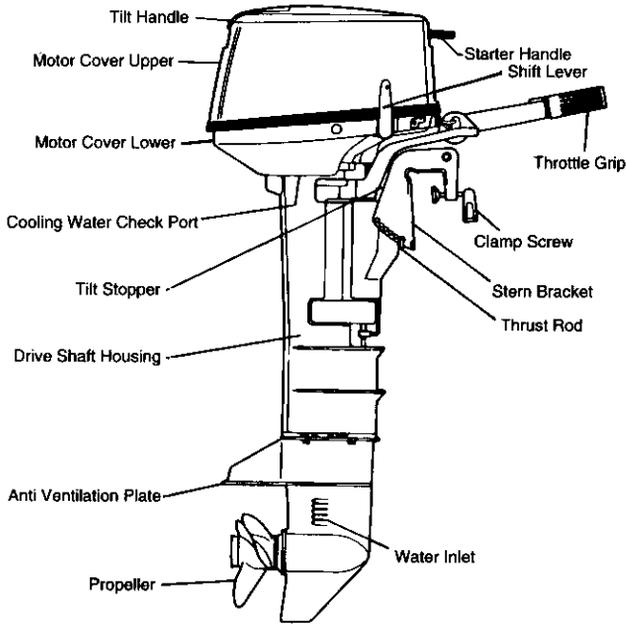

8BEF /9.8BEF

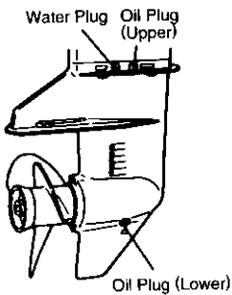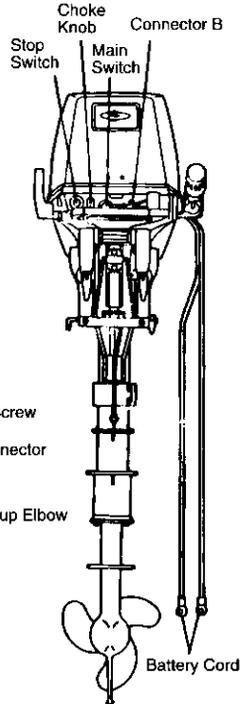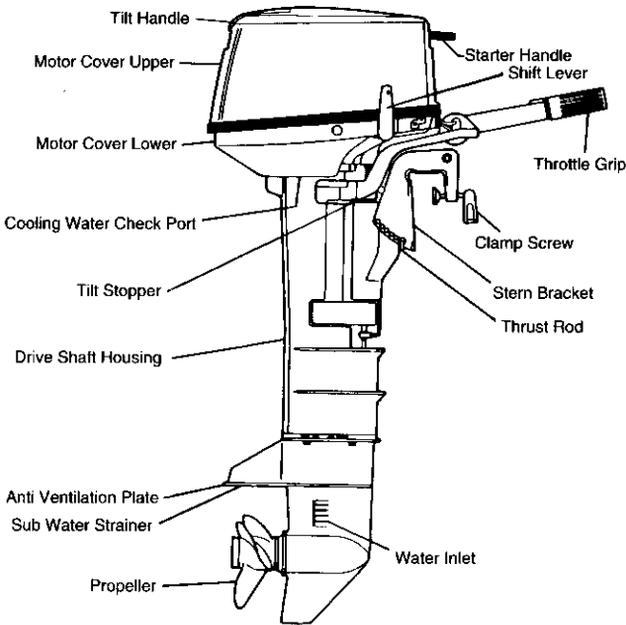

8BEP /9.8BEP

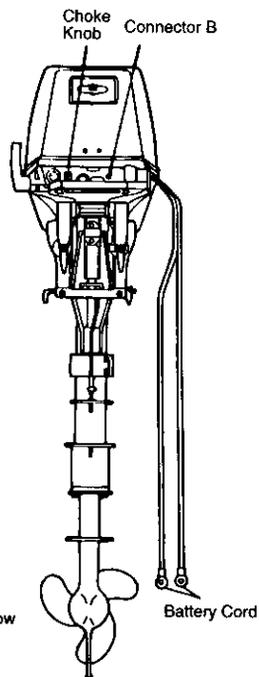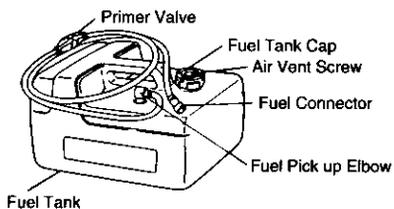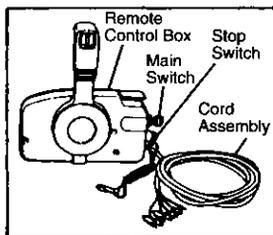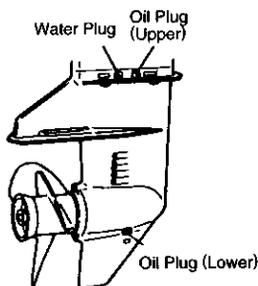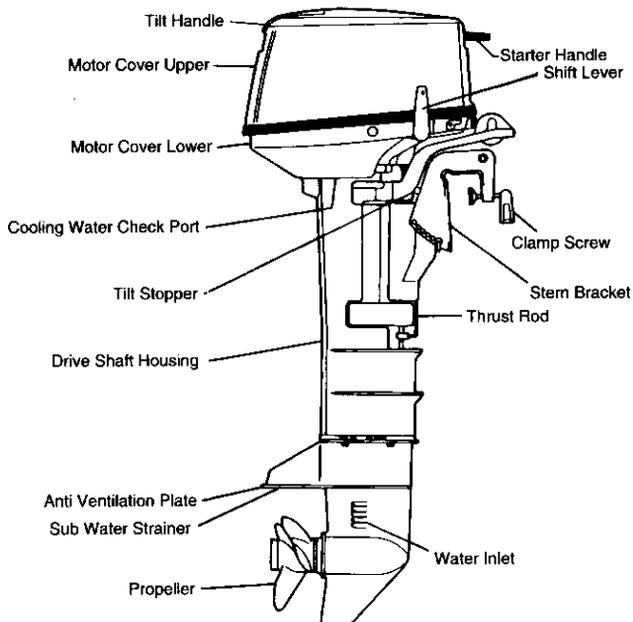

3. INSTALLATION

▲ WARNING


Most boats are rated and certified in terms of their maximum horsepower, and this is shown on the boat's certification plate. Do not equip your boat with an outboard that exceeds this limit. If in doubt, contact your dealer.

Do not operate the engine unit until it has been securely mounted on the boat in accordance with the instructions below.

3-1. Mounting the engine(s) on boat

(1) Position above keel line


- Set engine center of boat (Fig. 1)
- Distance between engines if two are mounted approximately 580 mm (22.8")

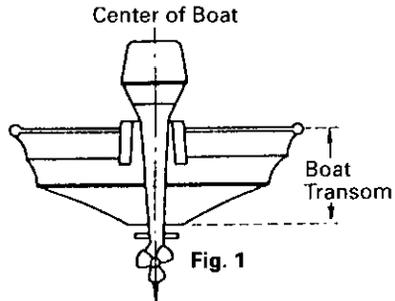

(2) Transom matching


Be sure that the anti-ventilation plate of the outboard is below the water surface when running with the throttle wide open. (Fig. 2)

If the above condition cannot be met due to the shape of the bottom of your boat, please consult the dealer.

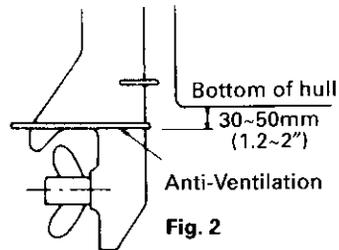

(3) To attach the engine to the boat, tighten the clamp screws by turning their handles. (Fig. 3)


Make sure the engine is secure to prevent loss or damage.

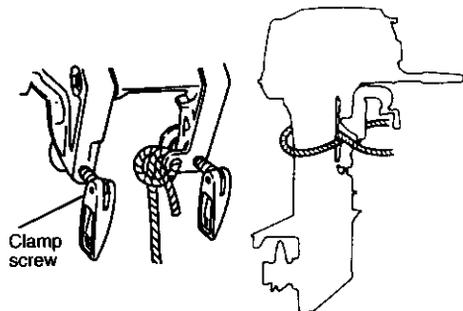


3-2. Installing the remote control device

It is recommendable to consult with your dealer for installation and adjustment of the remote control device.

- (1) Installation of the Remote Control Cables (Box side)
Follow the instruction manual provided with the remote control box.
- (2) Installation of the Remote Control Box on your boat
Follow the instruction manual provided with the remote control box.
- (3) Installing the Remote Control Cable (engine side) and the Cord Assembly (Wiring Harness)
 - ① Fitting of Holder Cap and Sleeve B Guide
 - Throttle side Fit the Holder Cap to the end of the Cable and fix it by the Nut.

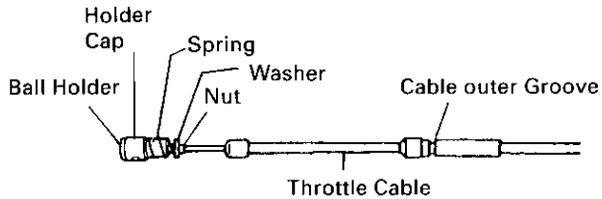

- Shift side Fit the Sleeve B Guide to the end of the Cable and fix it by the Nut.

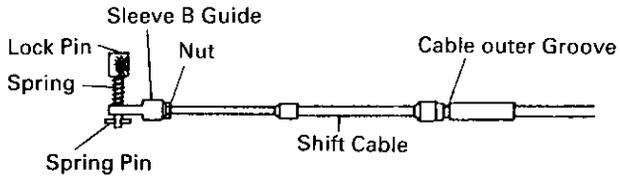


② Fitting of Remote Control Cable to Engine

- Throttle side

Insert the Throttle cable to the Cable clip and then connect the Holder cap to the Ball joint of Throttle lever.

- Shift side

Set the shift cable to the Cable clip and then insert the Lock pin at the Shift lever fitting hole and turn it 90° to lock it.

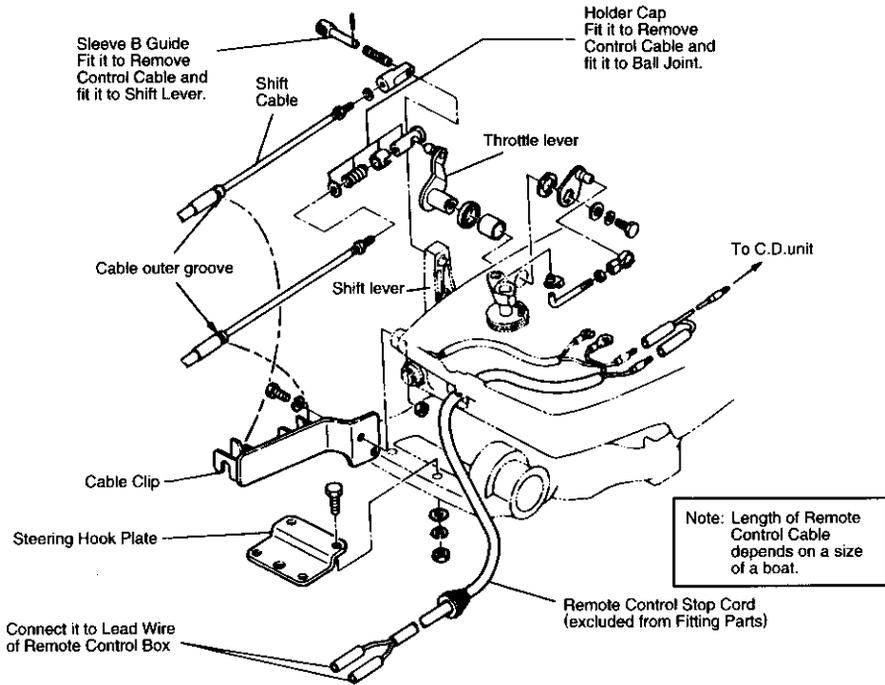

Note:

Put the control lever on the Neutral position and the Neutral warm-up lever in the fully closed position.


Note:

Confirm whether the engine side shift is in gear when shifting the control lever of the Remote Control Box to its first position in Forward or Reverse (about 32°) and whether the throttle of the carburetor is fully open when shifting the lever further.

Confirm whether the carburetor's throttle is fully closed when the control lever is shifted to the Neutral position. If it is not, adjust the position of the ball holder.

③ Connecting the Cord assembly (Wiring Harness)

- Pass the Cord assembly from the Remote control box through the hole in the Motor cover lower and connect the electric terminals and then clamp the Cord assembly according to the drawing below.

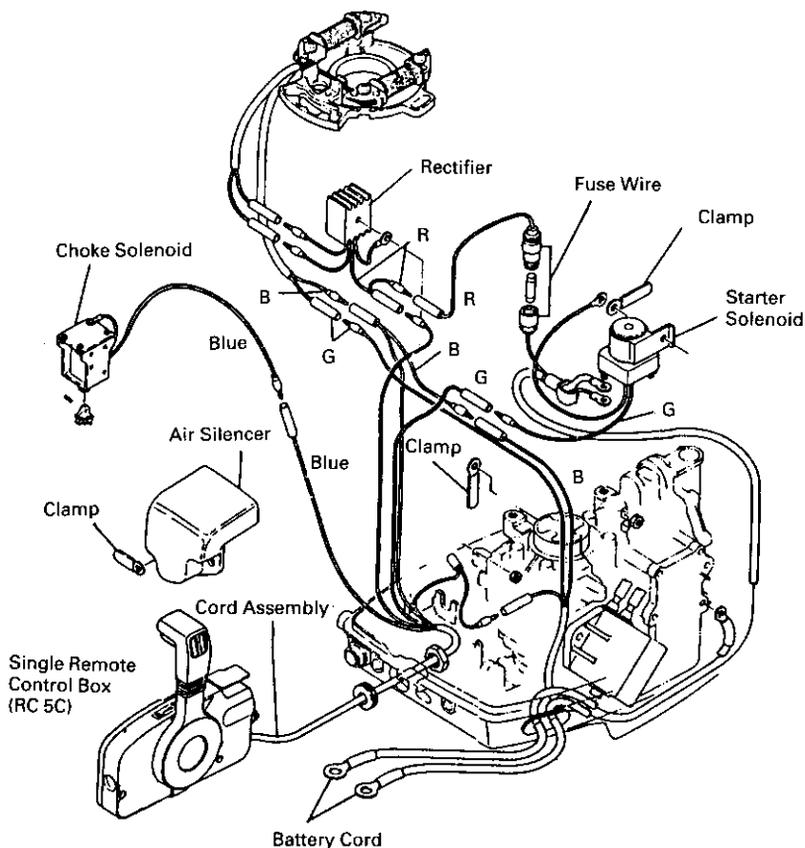

3-3. Installing the battery

- (1) Place the battery box in a convenient position away from possible spray damage. Securely fasten both the box and battery so they do not shake loose.

A 12 V battery with a recommended capacity of 40 AH or more is recommended.

▲ WARNING

Hydrogen gas is generated when a battery is charged. Therefore, keep the battery well ventilated during charging.

Electric sparks, cigarette smoking and other sources of fire must be avoided in the charging area to prevent explosion of the battery.

*The battery fluid (electrolyte) contains sulfuric acid.


If any electrolyte is spilled on the skin, clothes, etc., wash with copious amounts of water and consult a doctor. Always use safety glasses and rubber gloves when handling the battery.

Remark: Further to notice on the label of your battery.

Note:

- (1) Make sure that the battery leads do not get stuck between the motor and boat when turning, etc.
- (2) The starter motor may fail to operate if the leads are incorrectly connected.
- (3) Be sure to correctly connect the (+) and (-) leads. If not, the charging system will be damaged.
- (4) Do not disconnect the battery leads from the battery while the engine operation, the electrical parts could be damaged.
- (5) Always use a fully charged battery.

- (2) Connect the positive lead (+) to the positive terminal (+) of the battery, and then connect the negative lead (-). When disconnecting the battery always remove the negative lead (-) first. After connecting the positive terminal (+), securely place a cap on it to prevent short circuits.

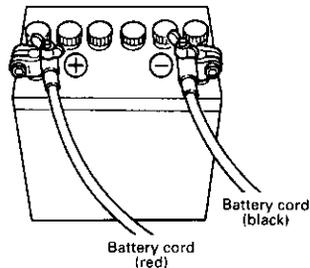

4. PRE-OPERATING PREPARATIONS

4-1 Gasoline and engine oil

DANGER

Gasoline vapors are present, an errant spark could cause an explosion or fire.

- Do not smoke near gasoline.
- Do not overfill gasoline.
If any gasoline is spilt, wipe it up immediately.
- Stop the engine before fill gasoline into the fuel tank.

● **Required types**

Gasoline

Unleaded, minimum pump posted 87 octane gasoline is recommended. (Octane is based on posted rating.)
(91 based on the research octane rating method).

Note:

Use of low-quality gasoline results in a short engine life as well as starting difficulties and other engine problems.

Note:

- (1) Gasoline containing alcohol (methanol (methyl), or ethanol (ethyl)), acetone or benzene, may cause:
 - Wear and damage to bearings, cylinder, piston, piston rings.
 - Corrosion of metal parts.
 - Deterioration of rubber parts and plastic parts.
 - Starting, idling, and other engine performance problems.
- (2) Do not use gasoline that contains more than 10% ethanol or more than 5% methanol.
- (3) Damages resulting from the use of gasolines that contain alcohol, acetone or benzene are not covered under the limited warranty.

Engine Oil

Use genuine engine oil or the other recommended one, that is, TCW3. We can not recommend any other two-stroke engine oil.

Caution

Do not mix different brands of oil. The mixing of different brands, or different kinds even if the same brand, may cause gelling, resulting in blockage of filter screens. This may lead to serious engine damage due to the lack of lubrication.

- Mixing ratio (50:1)

unleaded gasoline 50: GENUINE ENGINE OIL

or

recommended engine oil (TCW3) 1

Note:
You must break in the engine by operating it for 10 hours with mixing ratio of 25:1.

- Use of low-quality gasoline results in a short engine life as well as starting difficulties and other engine trouble.

4-2 Break-in

1) Brake-in period 10 hours

Time	0 min.~	10 min.~	1 hr.~	2 hrs.~	10 hrs.~
Method of operation	Idling or trolling	Throttle open less than 1/2 way (about 3,000 rpm)	Throttle open less than 3/4 of the way (about 4,000 rpm)	Throttle open 3/4 of the way (about 4,000 rpm)	Normal operating
Conditions	Cruising at no more than minimum speed		A full-throttle run is allowed for 1 min. every 10 min.	A full-throttle run is allowed for 2 min. every 10 min.	

2) Fuel mix ratio for break-in

Gasoline 25: Genuine Engine Oil 1

- 25:1 when using genuine engine oil or the recommended one (TCW3)

5. ENGINE OPERATION

5-1. Starting

▲ WARNING

Be sure to connect the emergency stop hook to your waist or clothing. The engine will shut down if the hook's line becomes disconnected from the engine.


Note:

The engine will not start unless this switch has been properly connected and locked beforehand.


Note:

Do not operate the engine without cooling water.


- ① Attach the fuel connector to the engine connector. The arrow mark on the primer valve should be facing the engine.

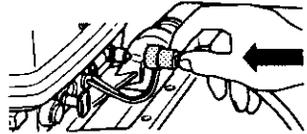


- ② Loosen the air vent screw on the tank cap.

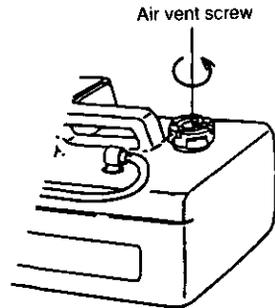

- ③ Feed fuel to the carburetor by squeezing the primer valve until it is firm.

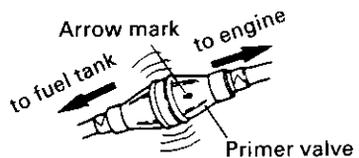

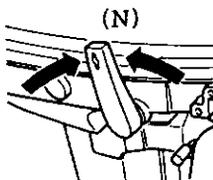


- ④ Place the shift lever in the Neutral position.

Be sure that the shift is in neutral when starting the engine.
This model is provided with a function that prevents starting in gear protection.


▲CAUTION

If the motor somehow does start in gear, do not use it. Contact your authorized dealer.

- ⑤ Turn the throttle grip until the mark on the grip faces the triangular mark on the steering handle.
- ⑥ Pull out the choke knob all the way.
(No choke operation is necessary when the engine is warm.)

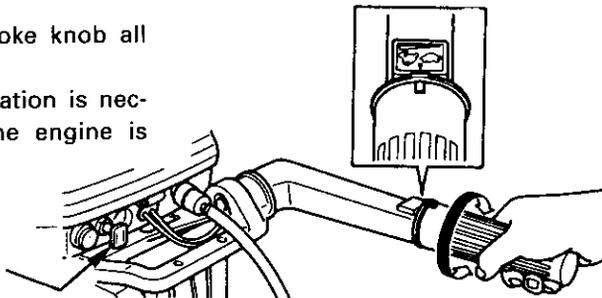


8B /9.8B type

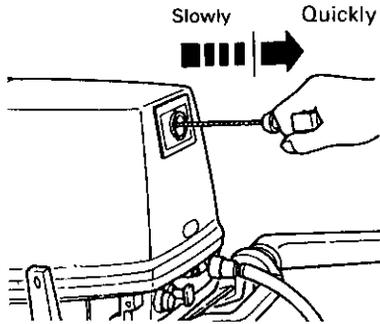

- ⑦ Pull the starter handle slowly until you feel resistance. Then pull it quickly.

EF type

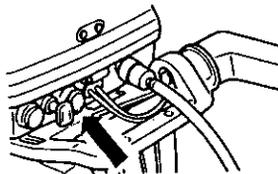


- ⑦ Push the starter switch button.
- ⑧ Release pushing the button when the engine has started.

Note:


If use the choke knob for the engine start, push back it when the engine has started.

EP type

- ④ Insert the main switch key.
- ⑤ Set the control lever in the Neutral position.
Raise the Neutral warm-up lever.

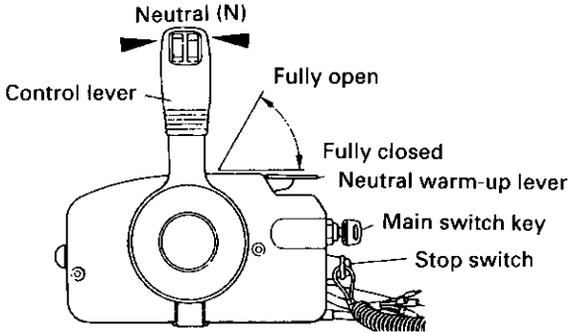

- ⑥ Turn the main switch key to START position. Then, continuously push the key to operate the choke.
Note: Choke operation is not necessary if the engine is warm.
- ⑦ Stop pushing the key when the engine has started.
The key returns to the original position automatically.

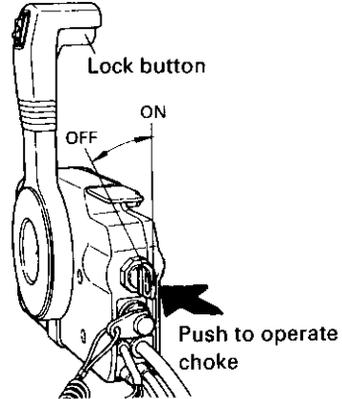

Note:

The neutral warm-up lever can not raise when the control lever shift in Forward or Reverse.


Note:

Types EF and EP


- Continuous operation of the starter motor shortens battery and starter motor life.
Operate the starter motor for a maximum of 3 seconds. If the engine does not start, wait 5 seconds before engaging the starter motor again.
- Do not engage the starter motor after the engine has started.

If the recoil starter or starter motor fails to operate


- Remove the motor cover upper and the recoil starter and then pull direct on the starter rope by hand.
- Use a 10 mm socket wrench as a handle on the rope.

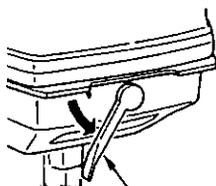

Hook Lever

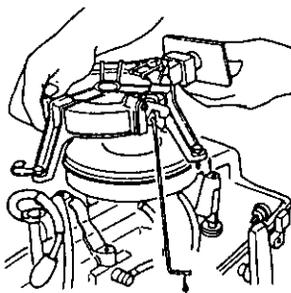

Starter Lock Rod

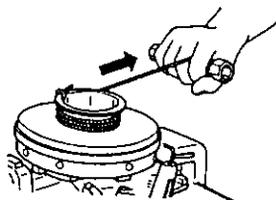

▲CAUTION

Be careful that your clothes or other items do not get caught in the rope or other engine parts.

To prevent getting things caught in the engine, do not re-attach the recoil starter after the engine has been started using the starter rope, but be sure to put the motor cover upper back on.

Immediately contact an authorized service shop when reaching shore.


5-2 Warming up the engine

Warm the engine at low engine speeds for about three minutes. This allows the lubricating oil to circulate to all parts of the engine. Operating the engine without warming it up shortens the engine's life.

Be sure to check that cooling water is coming out of the cooling water check port when warming up the engine.

Note:

If the engine is operated continuously without water discharging from the check port or idle hole, the engine may heat over.

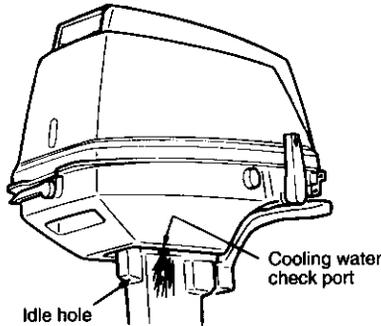

- Engine speeds
Idling speed after warming up.

Model	Clutch in	Clutch off
8B	750 rpm	950 rpm
9.8B	750 rpm	950 rpm

PROPELLER SELECTION

Propeller must be selected so that the engine rpm when cruising with a wide-open throttle is within the recommended range.

Model	Wide-open throttle rpm range
8B	4,500~5,500 rpm
9.8B	5,000~6,000 rpm

Genuine propellers are listed on PROPELLER TABLE of this manual.

5-3. Forward and reverse


▲ CAUTION

It may be dangerous to attempt shifting at high engine speed. Be sure to slow down to trolling or idling speed before shifting.

Note:

Do not increase Engine speed than necessary when reverse running.

8B /9.8B and EF Type

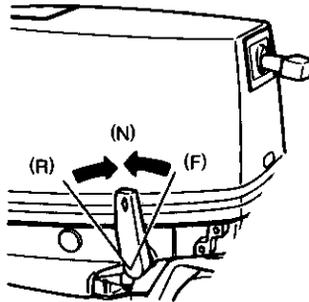


(1) Forward

Turn the throttle grip to reduce engine speed. When the engine reaches trolling speed, quickly pull the shift lever to the Forward position.

(2) Reverse

As when shifting to Forward, reduce the engine speed, when the engine reaches trolling speed, quickly push the shift lever to the Reverse position.

EP type

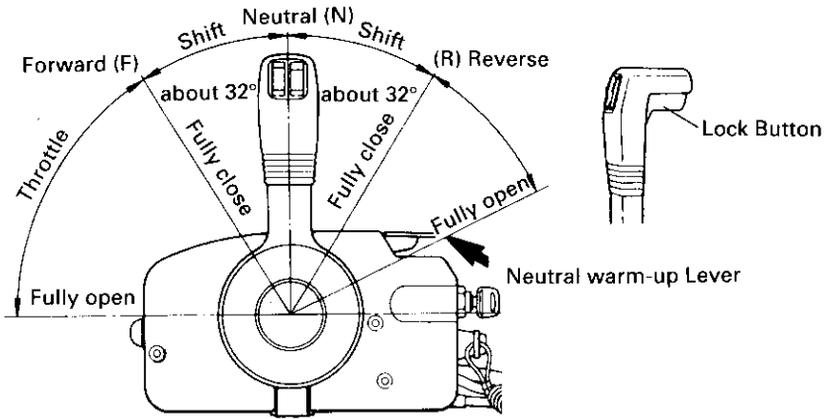

(1) Forward

Quickly push the control lever to the Forward (F) position at 32°, where the gear is connected, while lifting up on the lock button located at the bottom of the control lever grip. Further shifting will open the throttle.

(2) Reverse

Quick pull the control lever to the Reverse (R) position at 32°, where the gear is connected, while lifting up on the lock button located at the bottom of the control lever grip. Further shifting will open the throttle.

Note:

The Control Lever is inoperative unless the Neutral Warm-up Lever is in the fully closed position.


Note:

Reduce the engine speed when the Control Lever is in Neutral and do not increase the engine speed unnecessarily.


5-4. Stopping

8B /9.8B and EF type

- ① Turn the throttle grip to the low speed position.
- ② Put the shift lever in the Neutral position.
Run the engine for 2~3 minutes at idling speed if it has been running at full speed.
- ③ Push the stop switch to stop the engine.

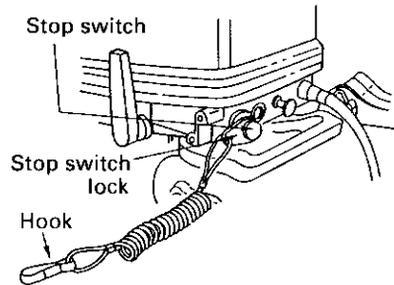

EP type

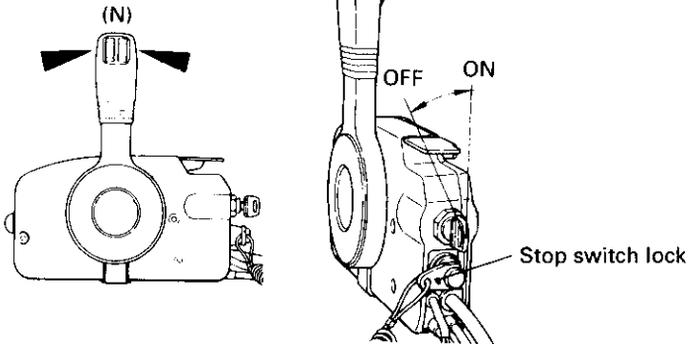

- ① Put the shift lever in the Neutral position and run the engine for 2~3 minutes at idling speed.
- ② Turn the main switch key to the OFF position or pull out the stop switch lock.

Note:

- After stopping the engine, close the air vent screw on the tank cap.
- Disconnect the fuel connector of the engine or the fuel tank.
- Disconnect the battery cord of the EF or EP type engine, if the engine will not be used for more than 3 days.

5-5. Trim angle

The trim angle of the outboard motor can be adjusted to suit the stern angle of the boat and the loading conditions. Choose an appropriate trim angle for the motor so that the anti-ventilation plate is parallel to water surface during operation.

- **Proper trim angle**


The position of the thrust rod is correct if the boat is horizontal during operation. (Fig. 1)

- **Improper trim angle**

Set the thrust rod lower the bow of the boat rises due to heavy pitching or unstable straight running. (Fig. 2)

- **Improper trim angle**

Set the thrust rod higher the bow of the boat goes under a wave. (Fig. 3)

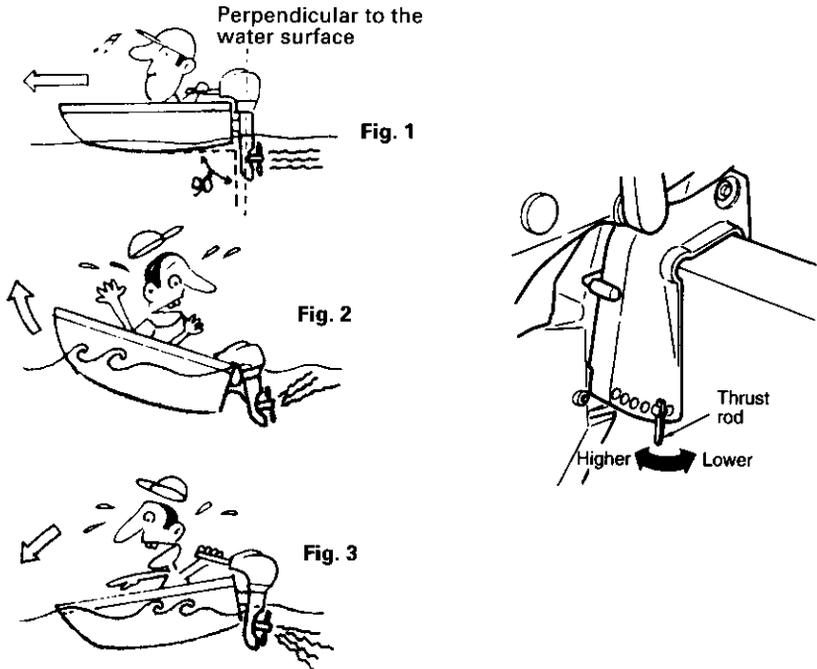

5-6. Tilt up, tilt down

⚠ WARNING

When tilting up or down, be careful not to place your hand between the swivel bracket and the stern bracket.


Be sure to tilt the outboard down slowly.

Note:

Stop the engine before tilting up.



(1) Tilt up

With the shift lever in Neutral or Forward, fully tilt the motor up toward you by holding the tilt handle provided at the rear of the upper motor cover. Then lower the tilt lever for locking at tilt-up position.

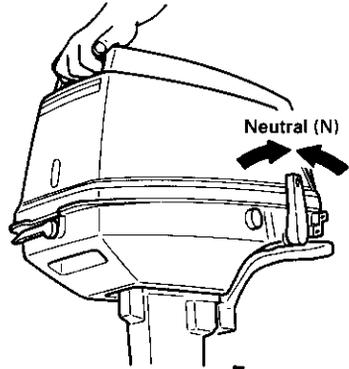

(2) Tilt down

Slightly tilt the motor up, and pull the tilt lever toward you to release the tilt-lock. Then lower the motor slowly. The motor will be automatically tilt-locked.

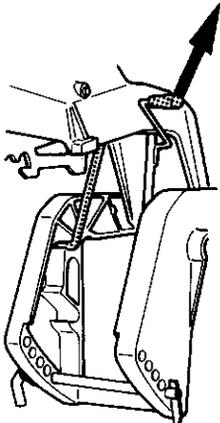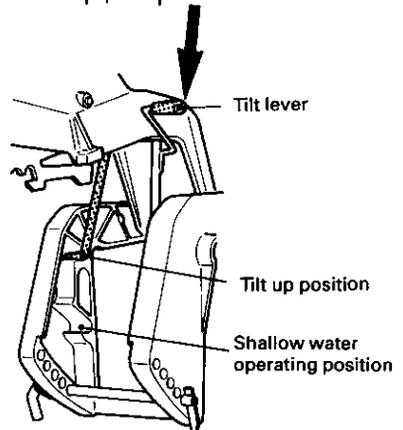

5-7. Shallow water operation


▲ WARNING

When shallow water operation, be careful not to place your hand between the swivel bracket and the stern bracket. Be sure to tilt the outboard down slowly.

Note:

Slow down to trolling speed, and shift to the Neutral before shallow water operating.

- (1) Shallow water driving position:
With the shift lever in Neutral or Forward, tilt the motor up slowly by about 40° and then return the motor down, the motor will be automatically set at the shallow water operation angle.
- (2) Tilt down from shallow water driving position:
Tilt the motor up fully and then return the motor down slowly to the normal running position.

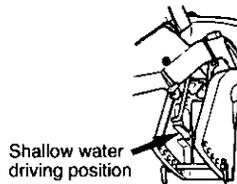

▲ CAUTION

- Make sure that the water strainer is submerged at all times and that water is continuously running out of the cooling water check port.
- Be sure to run the engine slowly when using the shallow water drive. Running at higher speeds will result in lack of control and may damage the gear case.
- Make sure that the motor does not strike the bottom, especially when running in REVERSE. If the motor does strike the bottom while in reverse, the impact is transmitted to the transom, which could damage both the motor and the boat.


6. REMOVING AND CARRYING THE MOTOR

6-1. Removing the motor

- ① Stop the engine.
- ② Disconnect the fuel pipe connector, the remote control cables and the battery cords from the motor.
- ③ Remove the motor from the hull and completely drain the water from the gear case.

6-2. Carrying the motor

Be sure to keep the engine vertical posture whenever you carry the motor.

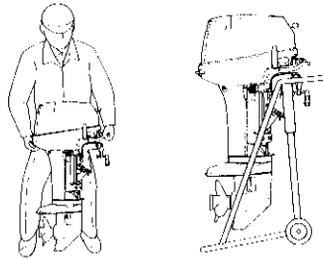

Note:


If you carry the motor horizontal posture, keep the power head higher than the propeller.

6-3. Storing the motor

Keep the motor vertical posture when you store it.

Note:

If you store the motor horizontal posture, lay the motor down on the ground with the handles facing upward.

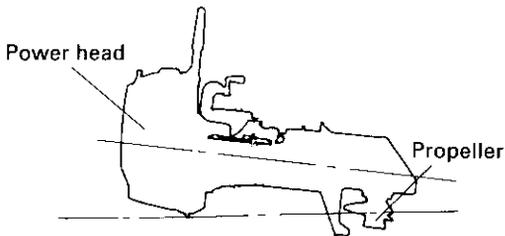


7. TRAILERING

▲ CAUTION

When trailering the engine installing on a boat, the motor should be in a running position fully tilting down. Trailering at tilted up condition of the motor may cause of damage to the motor, boat, etc. by unexpected tilt lock release getting a shock when trailering.

If trailering the motor at tilt down position is unavailable, fix the motor securely using a device (like a transom saver bar) at the tilting up position.

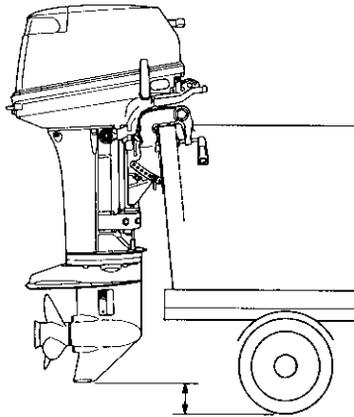


8. ADJUSTMENT

8-1. Steering force

The steering force can be adjusted in accordance with your preference by turning the steering adjust bolt.

For heavier steering Turn clockwise

For lighter steering Turn counterclockwise


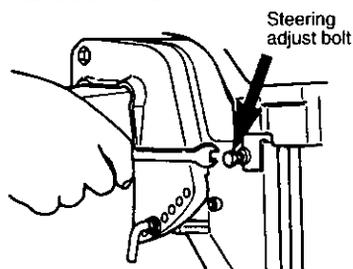


Note:

The steering adjust bolt is used to adjust the sliding load of the steering, but not to fix the steering. If excess tightening given to the bolt may lead a cause of damage to the swivel bracket.

8-2. Throttle grip

The turning force of the throttle grip can be adjusted with a throttle adjust screw.

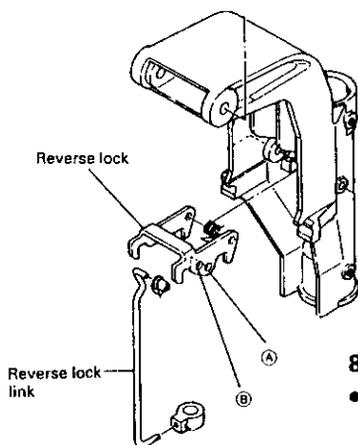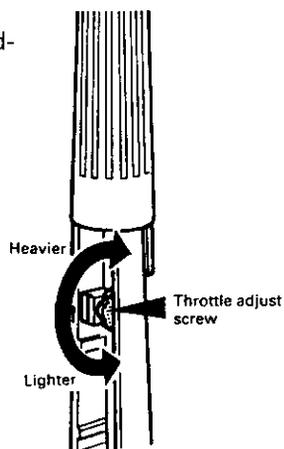

8-3. Reverse lock

- The shift lever is normally locked in position ① of the reverse lock in the reverse mode.
- When locking the shift lever in Reverse (R) or Neutral (N), shift the reverse lock link from ① to ② position of the reverse lock.

9. INSPECTION AND MAINTENANCE

Care of your outboard motor

To keep your motor in the best operating condition, it is very important that you perform daily, and periodic, maintenance as suggested in the maintenance schedules that follow.

▲ CAUTION

- Your personal safety and that of your passengers depends on how well you maintain your outboard motor. Carefully observe all of the inspection and maintenance procedures described in this section.
- The maintenance intervals shown in the checklist apply to an outboard motor in normal use. If you use your outboard motor under severe conditions such as frequent full-throttle operation or frequent operation in brackish water, maintenance should be performed at shorter intervals. If in doubt, consult your dealer for advice.
- We strongly recommend that you use only genuine replacement parts on your outboard motor. Damage to your outboard arising from the use of other than genuine parts is not covered under the warranty.

EPA Emissions Regulations

EPA (United States Environmental Protection Agency) has emission regulations and is controlling air pollution from new outboard motors. All new motors manufactured by us are certified to EPA as conforming to the requirements of the regulations. This certification is depend upon factory standards. Therefore, factory specifications must be followed when servicing emission related controls, or making adjustments. **Maintenance, replacement, or repair of the emission control devices and systems may be performed by any marine SI (Spark Ignition) engine repair establishment or individual.**

9-1. Daily Inspection

Perform the following checks before and after use.

Item	Points to Check	Action
Fuel System	<ul style="list-style-type: none"> • Check the amount of fuel in the tank. • Check for debris or water in the fuel filters. • Check the rubber hoses for fuel leakage. 	Replenish Clean or Replace Replace
Electrical Equipment	<ul style="list-style-type: none"> • Check that the main switch functions normally. • Check that the battery electrolyte level and specific gravity are normal. • Check for loose connections on the battery terminal. • Check that the stop switch functions normally and make sure the lock plate is there. • Check cords for loose connections and damage. • Check the spark plugs for dirt, wear and carbon build-up. 	Replace Replenish or recharge Retighten Remedy or replace Correct or replace Clean or replace
Throttle System	<ul style="list-style-type: none"> • Check that the choke solenoid and valve for the carburetor function normally. • Check if the carburetor and magneto work normally when turning the throttle grip, and check the links for looseness. 	Replace Correct
Recoil Starter	<ul style="list-style-type: none"> • Check the ropes for wear and damage. • Check the latchet for engagement. 	Replace Correct or replace
Clutch and Propeller System	<ul style="list-style-type: none"> • Check that the clutch engages correctly when operating the shift lever and remote control. • Visually check the propeller for bent or damaged blades. • Check that the propeller nut is tightened and the split pin is there. 	Adjust Replace
Installation of Motor	<ul style="list-style-type: none"> • Check all the bolts attaching the motor to the boat. • Check the thrust rod installation. 	Tighten
Cooling Water	<ul style="list-style-type: none"> • Check that cooling water is discharged from the cooling water check port after the engine has started. 	
Tools and Spares	<ul style="list-style-type: none"> • Check that there are tools and spare parts for replacing spark plugs, the propeller, etc. • Check that you have the spare rope. 	
Steering Devices	<ul style="list-style-type: none"> • Check the operation of the steering handle and remote control. 	
Other parts	<ul style="list-style-type: none"> • Check if the anode is securely installed. • Check the anode for corrosion and deformation. 	Repair if necessary Replace

A. Washing

After operating the motor in sea water or polluted water, or if it will be stored for a long period, wash all enclosures and the water cooling system with fresh water.


▲ WARNING

Before flushing, remove the propeller.

▲ WARNING

Never start or operate the engine indoors or in any space which is not well ventilated. Exhaust gas contains carbon monoxide, a colorless and odorless gas which can be fatal if inhaled for any length of time.

- Remove the water plug from the motor, and screw in the flushing plug (hose adapter). Connect a hose to the flushing plug to flush out the inside of the motor with water. (Be sure to seal the water inlet, located in the gear case, with tape.)
- With the shift lever in Neutral (N), run the engine at a low speed while flusing the cooling system to ensure all sea water and mud are removed.

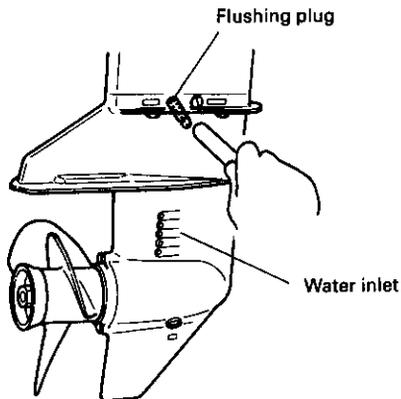


B. Replacing the propeller

A worn-out or bent propeller will lower the motor's performance, and cause engine trouble.

▲CAUTION

Before removing the propeller, remove the spark plug caps from the spark plugs to protect the propeller from damage.

- ① Take out the split pin, and remove the propeller nut and washer.
- ② Pull the propeller toward you and remove it.
- ③ Apply genuine grease to the propeller shaft before putting a new propeller on.

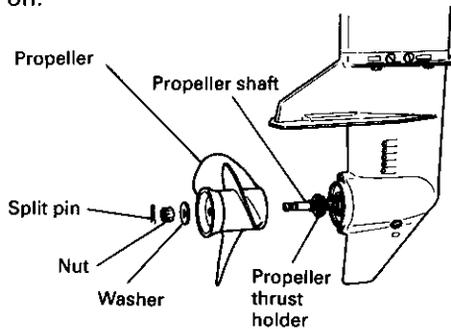


C. Replacing the spark plugs

If the electrode is fouled, has carbon deposits or is worn, clean or replace it as necessary.

- ① Remove the motor cover upper.
- ② Remove the spark plug by turning counter-clockwise, using a 21 mm socket wrench and handle.

Use spark plugs (NGK BP7HS-10 or BPR7HS-10) or recommended ones (CHAMPION L 82 YC or RL 82 YC with 1.0 mm gap).

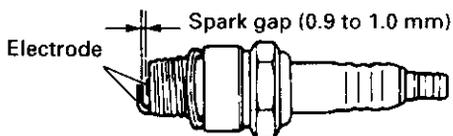

D. Replacing the anodes

A sacrificial anode protects the outboards from the electrolytic corrosion (metallic corrosion developed by feeble electricity). Anode is fitted at the gear case, and when the anode has been eroded more than 2/3, replace it immediately.

Note:

- Never grease or paint the anode.
- At each inspection, retighten the anode fixing bolt, as it is likely to be subjected to electrolytic corrosion.

9-2. Periodic Inspection

It is important to inspect and maintain your outboard motor regularly. At each interval on the chart below, be sure to perform the indicated servicing. Maintenance intervals should be determined according to the number of hours or number of months, whichever comes first.

Item		Servicing Interval			Action	Remarks
		10 hours or 1 month	50 hours or 3 months	Every 100 hours or 6 months		
Fuel System	*Carburetor	○		○	Strip, clean, and adjust. Adjust idling.	
	Fuel filter	○	○	○	Check and clean or Replace	
	Piping	○	○	○	Check and Replace.	
	Fuel tank		○	○	Clean.	
Ignition	Spark plugs		○	○	Check gaps. Remove carbon deposits or Replace	
	*Ignition timing	○		○	Adjust timing.	
Starting System	*Starter motor			○	Check for salt deposits and the battery cable condition.	
	Battery	○	○	○	Check installation, fluid quantity, gravity.	
	Starter rope	○	○	○	Check for wear or damage.	
Lower Unit	Propeller	○	○	○	Check for bent blades, damage, wear.	
	Gear oil	○	○	○	Change or replenish oil and check for water leaks.	
	*Water pump		○	○	Check for wear or damage.	Replace impeller every 12 months.
Bolts and Nuts		○	○	○	Retighten.	
Sliding and Rotating Parts. Grease Nipples.			○	○	Apply and pump in grease.	
Outer Equipment		○	○	○	Check for corrosion.	
Anode			○	○	Check for corrosion and deformation.	Replace.


* Have this handled by the dealer.

Note:


Your outboard motor should receive careful, and complete, inspection at 300 hours. This is the best time for major maintenance procedures to be carried out.

A. Changing gear oil

- 1) Remove the oil plugs (upper and lower), and drain the gear oil completely.

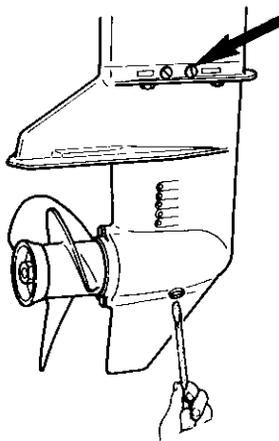

- 2) Insert the oil tube nozzle into the lower oil plug hole, and fill with gear oil by squeezing the oil tube until oil flows out of the upper plug hole.

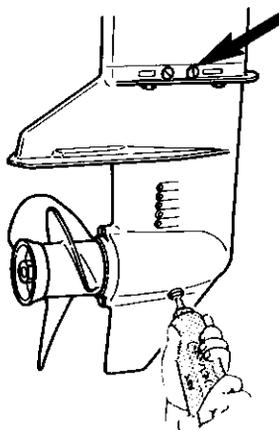

- 3) Install the upper oil plug, and then remove oil tube nozzle and install the lower oil plug.

Note:


Use genuine gear oil or the recommended one (API GL-5: SAE #80 to #90).

Required volume: approx. 320 mL.

B. Cleaning the fuel filters and the fuel tank


Fuel filters are provided inside the fuel tank and engine.

① Fuel tank filter

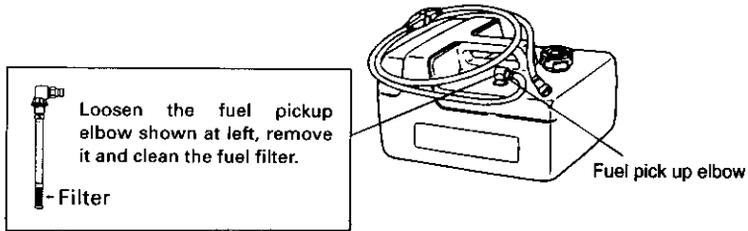

② Engine filter

Clean or replace the filter provided inside of engine cover if there is water or dust inside.

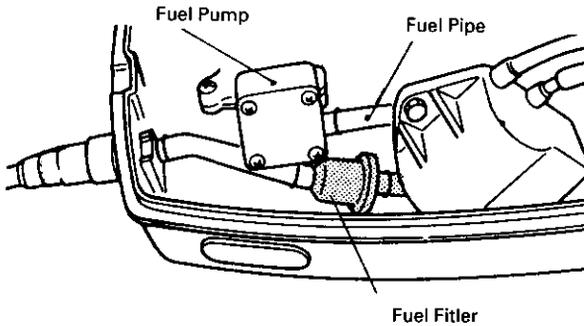

③ Fuel tank

Water or dirt in the fuel tank may cause engine trouble.

Clean the tank at specified times or after the motor has been store for a long period (over three months).

9-3. Off-season storage

When you are ready to put your outboard motor in storage, it is a good opportunity to have it serviced and overhauled by your dealer.

▲ CAUTION

Before servicing the motor for storage:

- Remove the positive (+) battery cord.
- Remove the spark plug caps from the spark plugs.
- Do not run the motor out of the water.

A. Engine

- ① Wash the engine exterior and flush the cooling water system thoroughly with fresh water. Drain the water completely.
Wipe off any surface water with an oily rag.
- ② Use a dry cloth to completely wipe off water and salt from the electrical components.
- ③ Drain all fuel from the fuel pipes, fuel pump, and carburetor, and clean these parts.
Keep in mind that if gasoline is kept in the carburetor for a long time, gum and varnish will be generated, causing the float valve to stick.
- ④ Remove the spark plugs and feed genuine engine oil or storage fogging oil in through the spark plug holes.
The oil will be fed into the crank case from the air silencer attached to the carburetors. Turn the engine over several times while feeding the oil into it and make sure it is evenly distributed.
- ⑤ Change the gear oil in the gear case.
- ⑥ Apply grease to the propeller shaft.
- ⑦ Apply grease to all sliding parts, joints, nuts, and bolts.
- ⑧ Stand the engine up vertically in a dry place.

B. Battery

- ① Disconnect the battery cables.
- ② Wipe off any chemical deposits, dirt, or grease.
- ③ Apply grease or vaseline to the battery terminals.
- ④ Charge the battery completely before storing it for the winter.
- ⑤ Recharge the battery once a month to prevent it from discharging and the electrolyte from deteriorating.
- ⑥ Store the battery in a dry place.

C. Electric Starter Motor

Coat the pinion gears and the shaft of the electric starter motor with grease.

9-4. Pre-season check

- ① Check the electrolyte level, and measure the voltage and specific gravity of the battery.

Specific Gravity at 20°C	Terminal Voltage (V)	Charge Condition
1.120	10.5	Fully discharged
1.160	11.1	1/4 charged
1.210	11.7	1/2 charged
1.250	12.0	3/4 charged
1.280	13.2	Fully charged

- ② Check that the battery is secure and the battery cables are properly installed.
- ③ Check that the shift and throttle function properly.
(Be sure to turn the propeller shaft when checking the shift function or else the shift linkage may be damaged.)

Note:

The following steps must be taken when first using the engine after winter storage.

1. Fill up the fuel tank completely with 12 liters.
Mixing ratio: Gasoline 25:1 Engine oil
Use unleaded gasoline and genuine Outboard Motor Oil. If this oil is not available, use NMMA TC-W 3 certified outboard motor oil.
2. Warm up the engine for 3 minutes in the "NEUTRAL" position.
3. Run the engine for 5 minutes at the slowest speed.
4. Run the engine for 10 minutes at half speed.
: In Steps 2 and 3 above, the oil used for storage inside the engine will be finished out to assure optimum performance.

9-5. Motor submerged in water

After taking your motor out of the water, immediately take it to your dealer.

The following are the emergency measures to be taken for a submerged outboard, if you can not take it to your dealer right away.

- 1) Wash the motor with fresh water to remove salt or dirt.
- 2) Remove the spark plugs, and completely drain the water from the engine by pulling the recoil starter several times.
- 3) Inject a sufficient amount of genuine engine oil through the spark plug hole and into the crank case from the carburetor side. Pull the recoil starter several times to circulate the oil throughout the motor.

9-6. Cold weather precautions

If you moor your boat in cold weather at temperatures below 0°C (32°F), there is the danger of water freezing in the cooling water pump, which may damage the pump, impeller, etc. To avoid this problem, submerge the lower half of the motor in water, or tilt the motor up above water level and pull the recoil starter several times to drain the water completely.

9-7. Checking after striking underwater object

Striking the sea bottom or an underwater object may severely damage the outboard. Immediately bring the outboard to the dealer and ask for the following checks.

- (1) Looseness or damage of power unit installation bolts, gear case and extension case bolts, propeller shaft housing bolts, upper and lower mount rubber bolts, and/or mount bracket bolts.

Ask the dealer to tighten any loose bolts any nuts, and to replace damaged parts.

- (2) Deformation and damage of mount rubber, the tilt stopper, thrust rod, gears and clutch, and/or propeller.

Ask the dealer to replace damaged or defective parts.

10. TROUBLESHOOTING

If you encounter a problem, consult the check list below to determine the cause and to take the proper measure.

Your dealer will always be happy to provide any assistance and information.

	Engine failing to start	Engine starting but stopping soon	Poor idling	Poor acceleration	Engine speed abnormally high	Engine speed abnormally low	High engine speeds not possible	Overheating of engine	Possible cause
FUEL SYSTEM	•	•							Empty fuel tank
	•	•	•	•		•	•	•	Incorrect connection of fuel system
	•	•	•	•		•	•	•	Air entering fuel line
	•	•	•	•		•	•	•	Deformed or damaged fuel pipe
	•	•	•	•		•	•	•	Closed air vent on fuel tank
	•	•	•	•		•	•	•	Clogged fuel filter, fuel pump, or carburetor
			•	•		•	•	•	Use of improper engine oil
	•		•	•			•	•	Use of improper gasoline
	•	•	•	•		•	•		Excessive oil in mixture
								•	Shortage of oil in mixture
	•			•					Excessive supply of fuel
	•	•	•	•		•	•	•	Poor carburetor adjustment
	•	•	•	•			•	•	Recirculation pipe broken
		•	•	•		•	•	•	Spark plugs other than specified
		•	•	•		•	•		Dirt, soot, etc. on spark plugs

	Engine failing to start	Engine starting but stopping soon	Poor idling	Poor acceleration	Engine speed abnormally high	Engine speed abnormally low	High engine speeds not possible	Overheating of engine	Possible cause	
ELECTRIC SYSTEMS	•	•	•	•		•	•		No spark or weak spark	
	•								Short circuit of engine stop switch	
	•		•	•		•	•		Incorrect adjustment of ignition timing	
	•								Loose battery terminal connection, corrosion	EP and EF types
	•								Discharged battery	
	•								Main switch trouble	
	•								Lock plate not fitted to stop switch	
	•								Disconnection of wire or loose ground connection	
	•								Insufficient battery capacity, loose terminal connection, corrosion	EP and EF types
	OTHERS	•		•	•		•	•		Incorrect adjustment of throttle link
							•	•	Insufficient cooling water flow, clogged or defective pump	
			•				•	•	Faulty thermostat	
				•	•		•	•	Cavitation or ventilation	
				•	•	•	•	•	Incorrect propeller selection	
			•	•	•	•	•	•	Damaged and bent propeller	
				•	•		•	•	Improper thrust rod position	
				•	•	•	•	•	Unbalanced load on boat	
				•	•	•	•	•	Transom too high or too low	

11. TOOL KIT AND SPARE PARTS


The following a list of the tools and spare parts provided with the motor.

Items		Quantity	Dimensions	Remarks
Service tools	Tool bag	1	10 × 13 mm 21 mm Cross- and straight-point	
	Pliers	1		
	Socket wrench	1		
	Socket wrench	1		
	Socket wrench handle	1		
	Screwdrivers	1		
	Screwdriver handle	1		
Spare parts	Starter rope	1	1000 mm	
	Spark plug	1	NGKBP7HS-10 or BPR7HS-10	
	Split pin	1		
Parts Pack- aged with En- gine*	Fuel tank	1		
	Primer bulb	1 set		
	Remote control box	1 set		
	Remote control attach- ment	1 set		
	Flushing plug	1		


* Not provided with the motor in some markets.

12. ACCESSORIES


Alternator (12 V, 80 W)
(for lamp in run mode only)

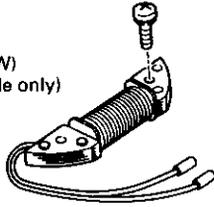


Tachometer

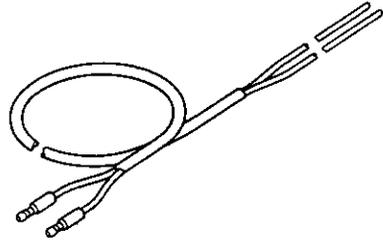

 Extension cord for light
(Lights are available on the market.)



Genuine grease
(250g)

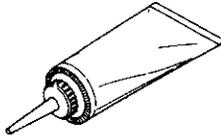


Genuine gear oil
(500mL)



Touch-up paint




Genuine engine oil
(0.4L, 1L, 4L, 20L)

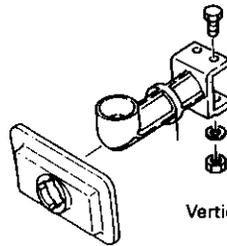

Vertical starter

Rectifier (for charging
battery 12 V)

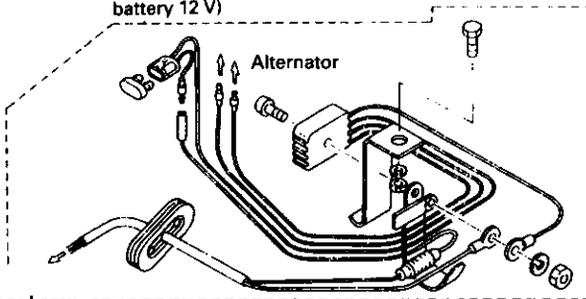

Battery or Lamp

13. PROPELLER TABLE

Use a genuine propeller.


A propeller must be selected so that the engine rpm measured at wide open throttle while cruising is within the recommended range: 8B = 4500 to 5500 rpm. 9.8B = 5000 to 6000 rpm.

Light boats		Heavy boats		
Size as Indicated on propeller		8.5	7.5	6.5
Propeller (mm) Size Diameter × pitch (inch)		216 × 214	216 × 190	216 × 165
		8.5 × 8.5	8.5 × 7.5	8.5 × 6.5
Model	8B	S	L, UL	○
	9.8B	S	L, UL	○


○: Option

S (short), L (long), UL (extra long): Transom height

14. WIRING DIAGRAM (8B /9.8B)

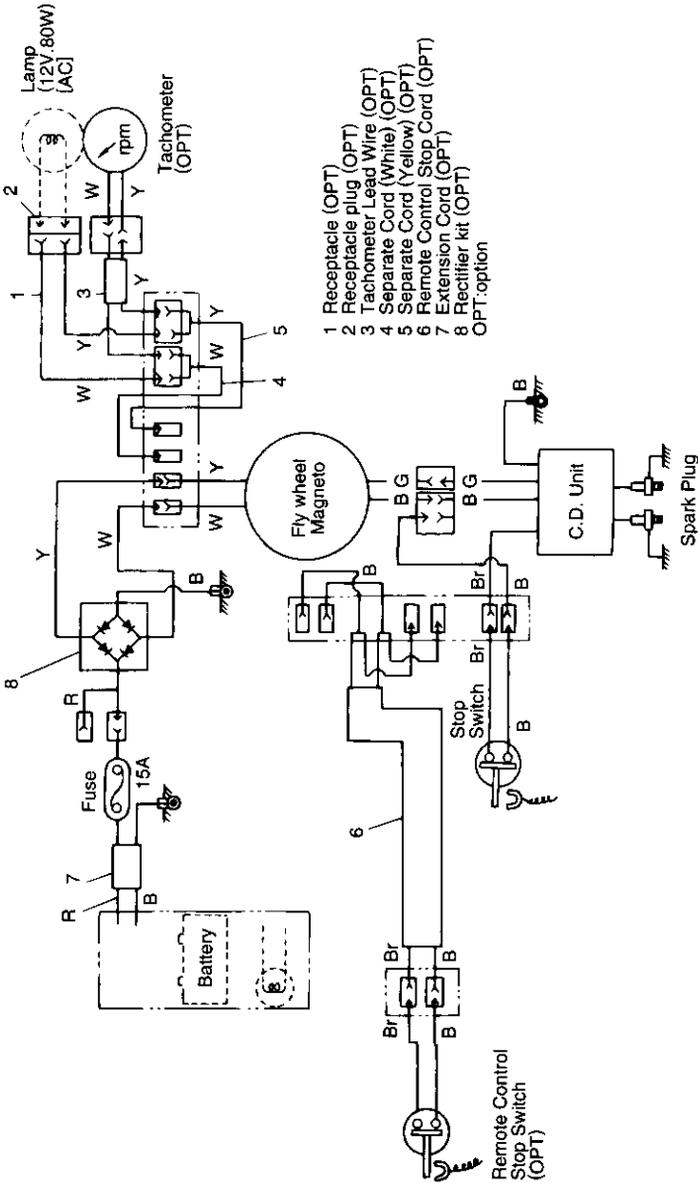


WIRING DIAGRAM (EF type)

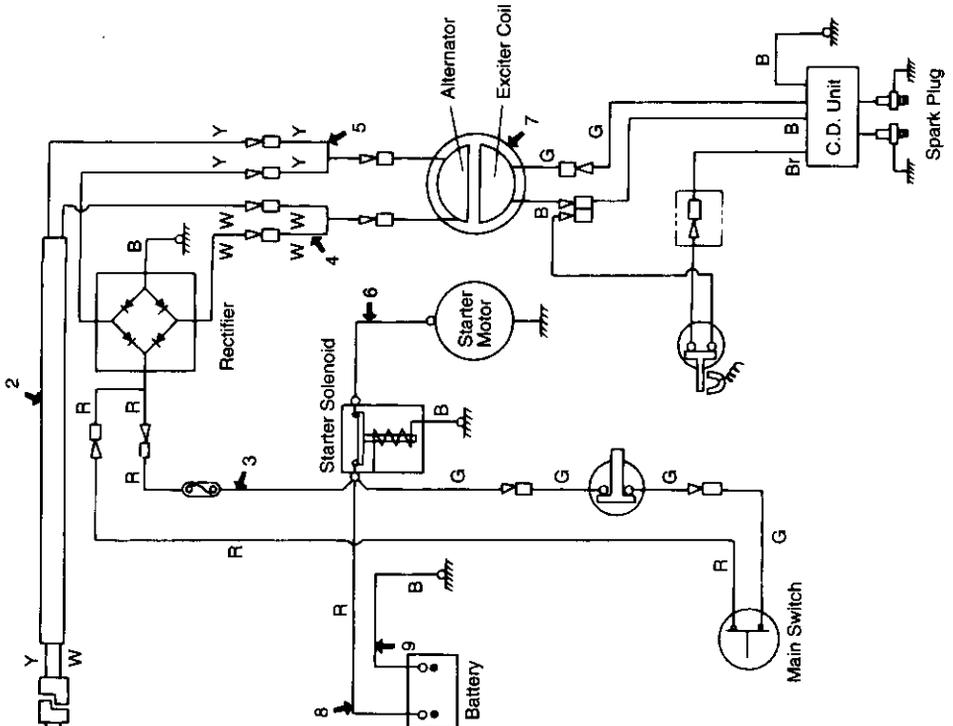

- 1 Tachometer (OPT)
- 2 Tachometer Lead Wire (OPT)
- 3 Fuse Wire
- 4 Separate Cord (White) (OPT)
- 5 Separate Cord (Yellow) (OPT)
- 6 Starter Cord
- 7 Flywheel Magneto
- 8 Battery Cord (red)
- 9 Battery Cord (black)
- OPT. option


WIRING DIAGRAM (EP type)

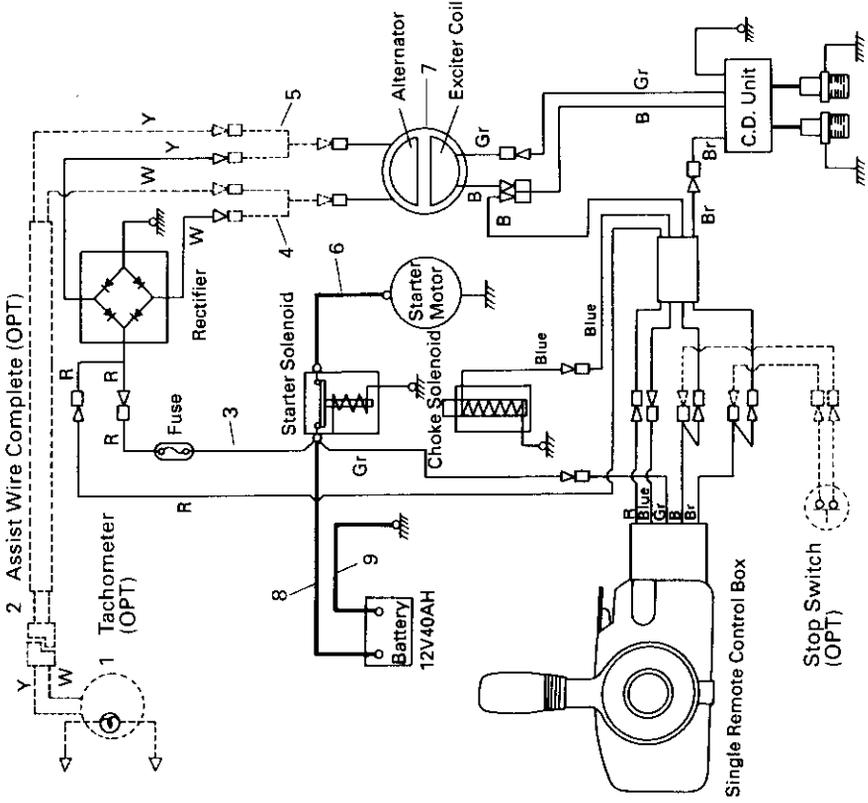

- 1 Tachometer (OPT)
- 2 Tachometer Lead Wire (OPT)
- 3 Fuse Wire
- 4 Separate Cord (white) (OPT)
- 5 Separate Cord (yellow) (OPT)
- 6 Starter Cord
- 7 Flywheel Magneto
- 8 Battery Cord (red)
- 9 Battery Cord (black)

OPT: option

WIRING DIAGRAM (Single Remote Control Box)

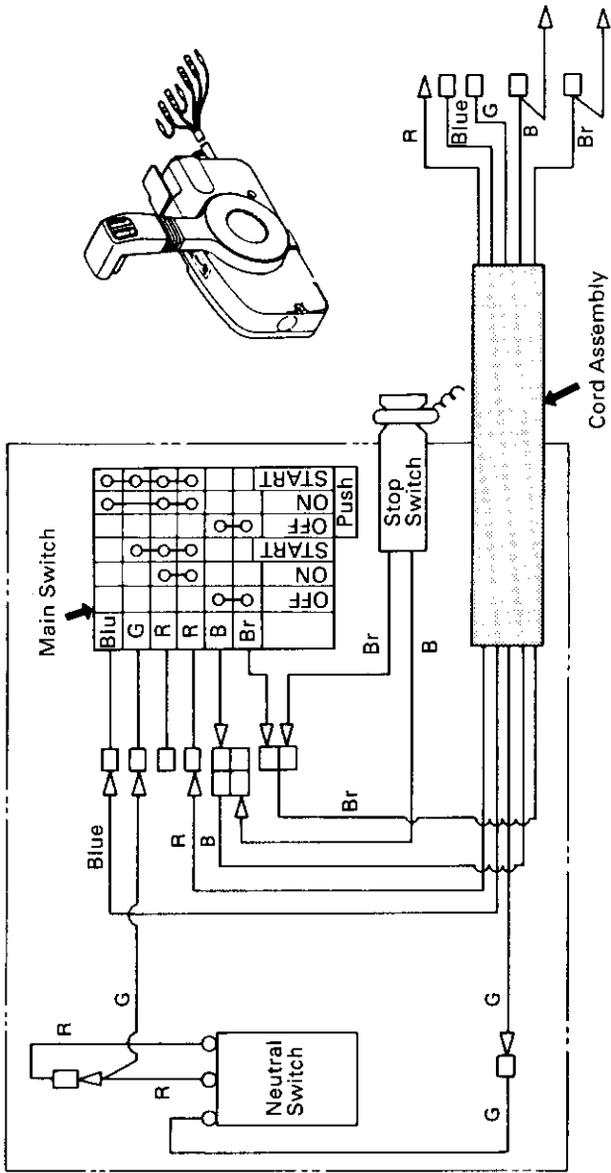

WARNING:

The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.



Address: 4-9, 3-chome, Azusawa, Itabashi-ku,
TOKYO 174-0051, Japan
Phone: TOKYO (03)3966-3117
Facsimile: TOKYO (03)3969-7885